

WiFi Thermostat 562



Home Screen

After 60 seconds of inactivity, the thermostat home screen displays only the time and the temperature.

The diagram illustrates the thermostat's home screen and its various navigation and control options. The main screen displays the brand name 'tekmar', the current time '10:30 AM', outdoor temperature '60°' with a weather icon, and the current floor temperature '70°'. It also shows the current mode 'Early Start' and 'Heat On'. At the bottom, there are controls for 'Mode Heat', temperature adjustment (up/down arrows), and 'Go to settings' (gear icon).

Navigation options include:

- Go to schedule:** Indicated by a line pointing to the calendar icon.
- Current time:** Indicated by a line pointing to the '10:30 AM' display.
- Swipe to view:** Indicated by a line pointing to the weather and temperature indicators. The list includes:
 - Weather
 - Outdoor temperature
 - Floor temperature
 - Heat To setting
 - Cool To setting
- Current temperature:** Indicated by a line pointing to the '70°' display.
- Equipment operation (Heat or Cool On):** Indicated by a line pointing to the 'Heat On' text.
- Go to settings:** Indicated by a line pointing to the gear icon.
- Change operating mode:** Indicated by a line pointing to the 'Mode Heat' button.

Two detailed views are shown below the main screen:

- Mode Selection:** A screen titled 'Mode' with buttons for 'Heat', 'Cool', 'Auto Heat-Cool' (highlighted in yellow), and 'Off'. At the bottom are 'Save' and 'Cancel' buttons with checkmark and X icons respectively.
- Temperature Adjustment:** A screen titled 'Temperature Adjustment' with 'Heat To' (70) and 'Cool To' (75) buttons. A yellow 'Hold Until 5:00 PM' button is shown, with a note: 'Hold overrides the programmed schedule until the time shown'. Below it is a 'Save to Schedule' button and a set of navigation icons (checkmark, up/down arrows, X).


A 'MENU SELECTION' screen is also shown, featuring buttons for 'AWAY', 'SCHEDULE', 'DISPLAY', 'TIME', 'WIFI', 'SETUP', a back arrow, and 'FAN'. It indicates 'WIFI: Connected' at the bottom.

User Settings

Away

Use the Away setting to save energy when the building is unoccupied


Operates normally
Operates using the Away temperature selected in the Setup menu

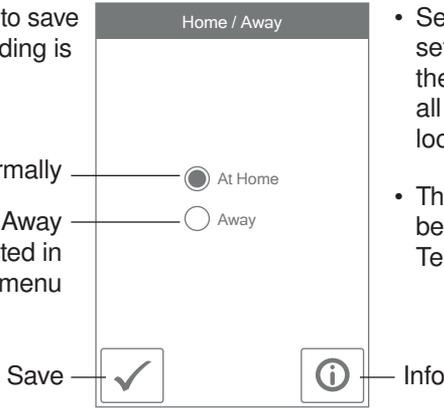

- Selecting the Away setting on a thermostat or the mobile app will affect all devices linked to that location through the app.
- The Away temperature can be adjusted in the Setup / Temps menu.

Schedule

Current group of program days.
Early Start anticipates the time required to heat or cool a room and starts early.

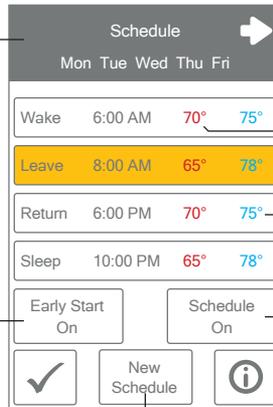

Go to the next group of program days.


Heating temperature

Cooling temperature

Set to On to follow the schedule. Set to Off to use the same temperature all of the time.

Creates a new schedule.

Set schedule start time
Set heating temperature
Set cooling temperature

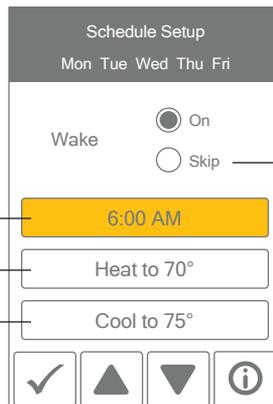

Select skip if you don't want a temperature change.

Display

DISPLAY 1/2

Select °F or °C — Temperature Units: °F

Energy Use: Monthly — Energy use. See below.

Brightness when touching the display — Brightness - Active: 80%

Brightness after 60 second timeout of no use — Brightness - Inactive: 50%

Choose the background color — Theme: Light

Language: English — Select English, French or Spanish

← ▲ ▼

10 second count down to allow the screen to be cleaned with a moist cloth. — Clean Screen: OFF

← ▲ ▼

Energy Use

Daily Usage


Today	0 hrs	0 hrs
Yesterday	0 hrs	0 hrs
Tue	0 hrs	0 hrs
Mon	0 hrs	0 hrs
Sun	0 hrs	0 hrs
Sat	0 hrs	0 hrs
Fri	0 hrs	0 hrs

View each day's run time for both heating and cooling.

✓ Monthly Usage ⓘ

Toggle between Daily and Monthly Usage.

Time

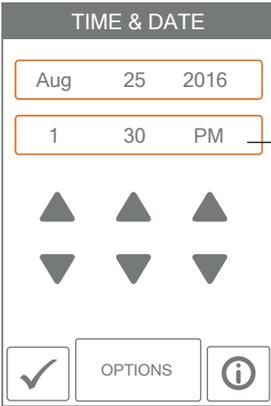

When connected to the Internet, the time can be set automatically.

The time and date can be manually set by highlighting a field and then using the ▲ or ▼ buttons.


Time options are:

- 12 hour or 24 hour time format
- Automatic or manual time setting
- Time zone
- Daylight savings time

NOTICE


Incorrectly setting the time and date manually may prevent the thermostat from communicating to the mobile app. Automatic time source is recommended when using an Internet connection.

Fan

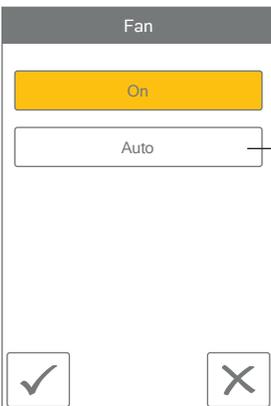

The fan is normally off when set to auto but turns on when needed for the heating or cooling equipment.

When a programmable schedule is used, there is a fan setting for each time period.

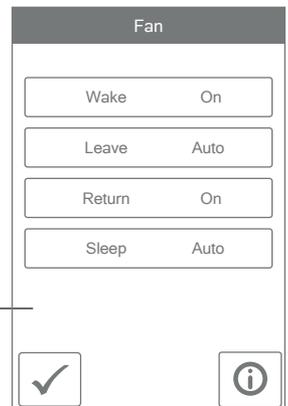

NOTICE

Before using the WiFi features of this product, you must accept the Terms of Use, as amended from time to time and available at [Watts.com/terms-of-use](https://www.watts.com/terms-of-use). If you do not accept these terms, this product can still be used without WiFi features.

The thermostat includes a step by step tutorial to setup the WiFi connection.

Tutorial

Before first using wi-fi features of this product, you must accept the Terms of Use available at <https://www.watts.com/terms-of-use> by pressing AGREE below.

If you do not accept these terms, this product can still be used without wi-fi features.

DISAGREE AGREE

Step 1

Agree to Terms of Use

WIFI

Off
 On

NEXT

Step 2

Turn on WiFi

NETWORK SSID

Select a network from the list:

Your House ▼

← CONNECT

Step 3

Enter wireless network name. It must support WPA2 security encryption.

Enter Password

A	B	C	D	E	F
G	H	I	J	K	L
M	N	O	P	Q	R
S	T	U	V	W	X
Y	Z		Shft	A/1	Del

← CONNECT

Step 4

Enter WiFi password.

ZIP/Postal

1	2	3	4	5	6
7	8	9	0	-	/
:	;	()	\$	&
@	"	.	,	?	!
'	\		Shft	A/1	Del

OK

Step 5

Enter ZIP or postal code. This determines your location for weather information.

Time Source

Automatic
 Manual

NEXT

Step 6

Select if the time is set automatically from the Internet or manually.

Watts® Home App


To view and adjust the WiFi Thermostat using a mobile phone or tablet, download the Watts Home mobile app from the Apple® iTunes® Store or from the Google Play® Store.

Add Thermostat to App




Step 1

Create a new account. Then login using your username and password.

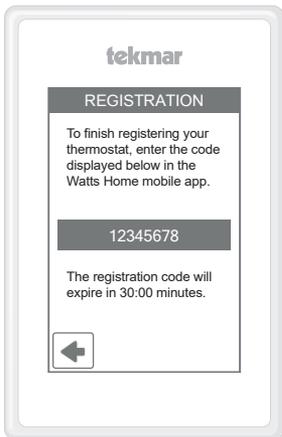

Step 2

On the thermostat, go to WiFi menu and press Register Device.

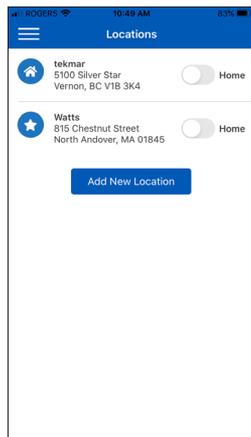

Step 3

Swipe left (Apple) or long hold (Android) to edit the Location name.




Step 4

Press the Location name and Add New Device.



Step 5


Enter the 8 digit code from the thermostat into the mobile app. Then enter the thermostat's room name.

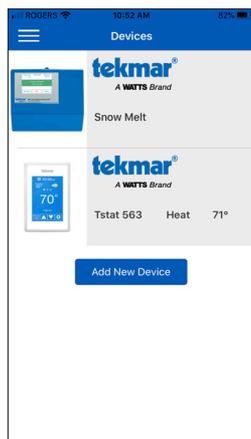

The thermostat is now listed on the Devices page.


Using the App

Settings

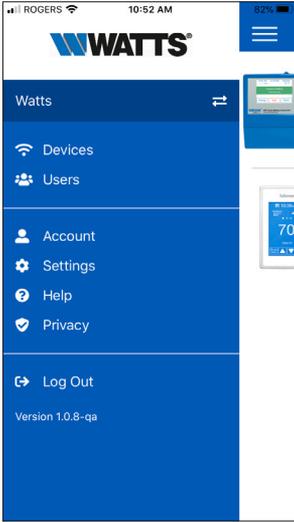

Press ☰ for settings


Locations

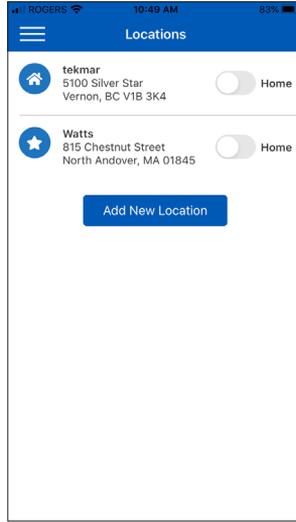

Toggle to **Off** to save energy when you are away for a day or more


Swipe left or long hold to edit or remove location

Devices

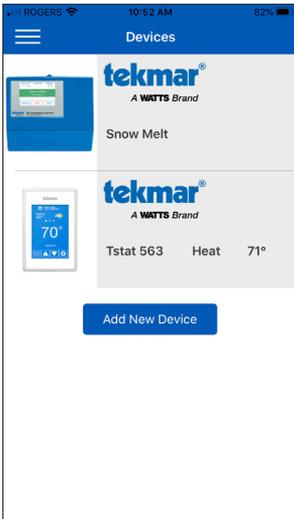

Swipe left or long hold to edit or remove device

Thermostat

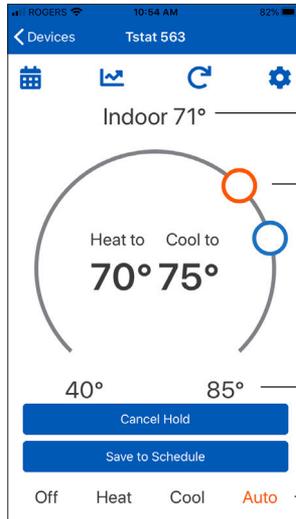

Current temperature

Change temperature setting

Limits

Mode

☰ Edit schedule

📊 Energy use

🔄 Refresh

⚙️ Thermostat settings

Settings

ROGERS 10:55 AM 81%

≡ User Settings Save

NOTIFICATIONS

Push

Email

Text

Phone Number
1555 555 5555 ✕

PREFERENCES

Language
English

Temperature Scale
Fahrenheit

Measurement Scale
Imperial

Change the notification and unit settings for your account

My Account

ROGERS 10:54 AM 81%

≡ Account



The following information is managed outside of the Watts Home application. Please click the 'Update' button below to make changes in the system of record.

 user name

 user@email.com

Update

Update your user name

Invite Users

ROGERS 10:55 AM 81%

< Users Invite User



 name@email.com

 Plumber

Send Invite

Invite other users to access all the devices at a location

Page left intentionally blank

Page left intentionally blank

Need help? Go to our website or contact us.

tekmarControls.com | tekmar.customerservice@wattswater.com | 1-800-438-3903

tekmar[®]

A WATTS Brand

Tel: 1-800-438-3903 • Fax: (250) 984-0815
tekmarControls.com